


## GS4 Premium pH/EC Combo Pen Tester




3-color large LCD screen

- White for measurement mode
- Green for calibration mode
- Red for calibration error

One-tap switch between  
pH, EC, 500ppm & 700ppm




Simplest design allows you to complete  
2-point calibration within 30 seconds  
to keep the highest accuracy.

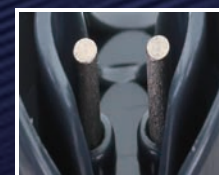

The replaceable pH/EC combo probe  
built with lithium glass membrane and  
titanium alloy ensures high accuracy,  
fast response & durability.

**\*Tips to quickly get  
a stable reading.**

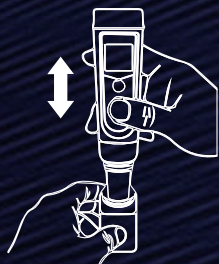

Before calibration,  
**shake the probe  
vertically** for a few  
seconds in the  
calibration bottle.





When measuring,  
make a **quick stir**  
in the solution  
before taking the  
reading..

Lab-Grade Instruments Designed  
Specifically for Growers



## Technical Specs

Range	0.0 to 14.0 pH, 0 to 10.0 EC, 0 to 7000ppm (700ppm), 0 to 5000ppm (500ppm), 0 to 50°C (32 to 122°F)
Resolution	0.1 pH, 0.1 EC, 10ppm (700ppm), 10ppm(500ppm), 0.1°F/0.1°C
Accuracy	±0.1 pH, ±0.1 EC ±30ppm (500ppm) ±40ppm (700ppm) ±1°C/±1°F
Temperature compensation	Automatic
Calibration	pH: automatic 1 to 3 points (7/4/10) *10.01 pH solution sold separately; EC: automatic 1 point (2.77 EC)
Unit	pH, EC, 500ppm, 700ppm, °F, °C
Power supply	4-AAA alkaline batteries, up to 1000 hours of operation
Backlight	White (measurement); Green (calibration); Red (errors)
Reading hold	Manual
Warranty	Two years for the instrument, one year for the probe
pH probe	Low-resistance lithium glass membrane, double-junction, blue gel electrolyte
EC probe	Titanium alloy
Successful calibration indicators	M (7.00 pH/2.77 EC), L (4.00 pH), H (10.01 pH)
Low battery reminder	
Waterproof rating	IP67
Reading stabilization icon	

## What's in the box

